



# Digital TV

## Smart Steps

1. Verify your TV and SureWest set-top box is securely plugged into a power outlet.
2. Verify your TV is on channel 3 or 4.
3. Verify TV is on the correct video input by pressing Source or Input on your TV remote until you see a picture.
4. Power cycle your SureWest set-top box by unplugging the black power cord from the back of the set-top box for 10 seconds and then plug it back in. Wait for the box to reset, which may take several minutes before a picture will appear.

